




Sony Cybershot DSC-T5 Battery Replacement

This guide will show you step by step how to replace the battery on your Sony Cyber-Shot DSC-T5.

Written By: Edwin Floyd





Step 1 — Battery

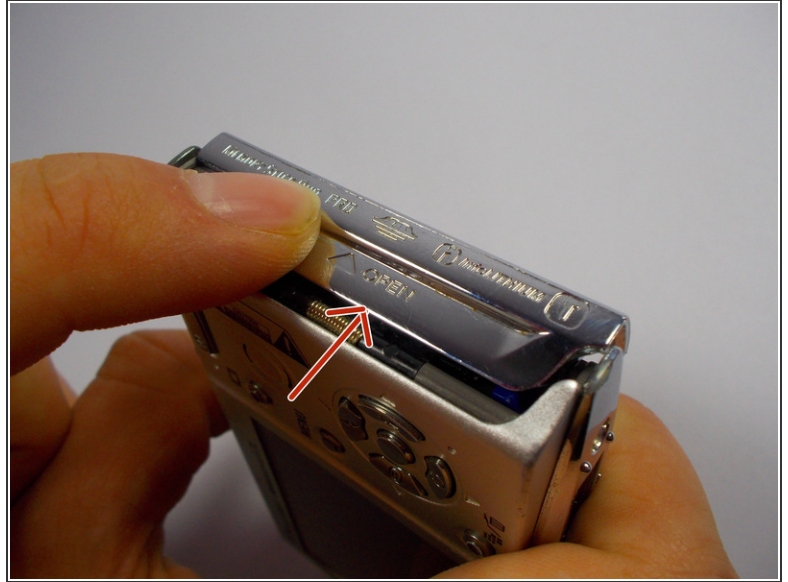


- Push firmly on right side panel labeled "Open"

Step 2

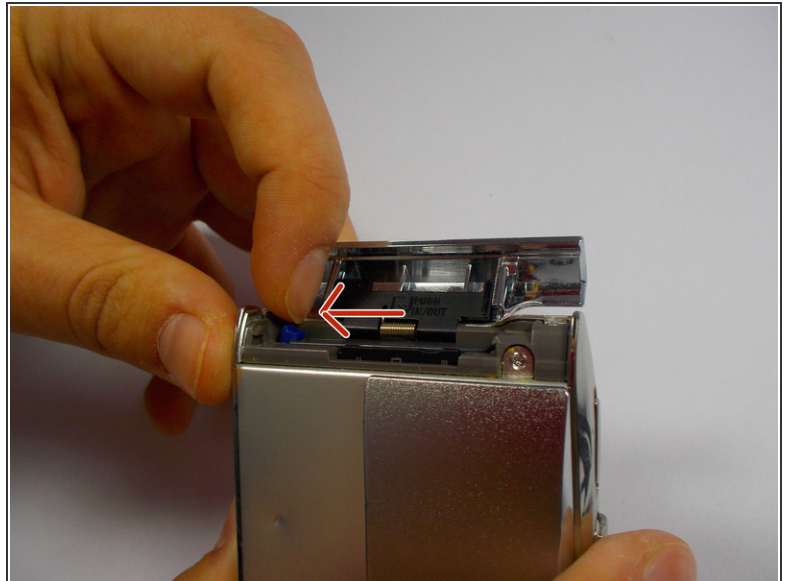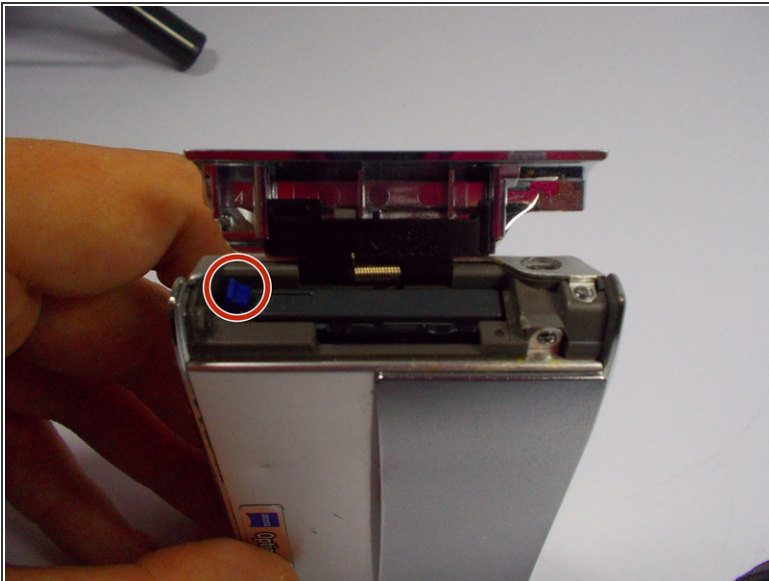

- Push blue tab towards bottom of camera to release the battery pack.

Step 3

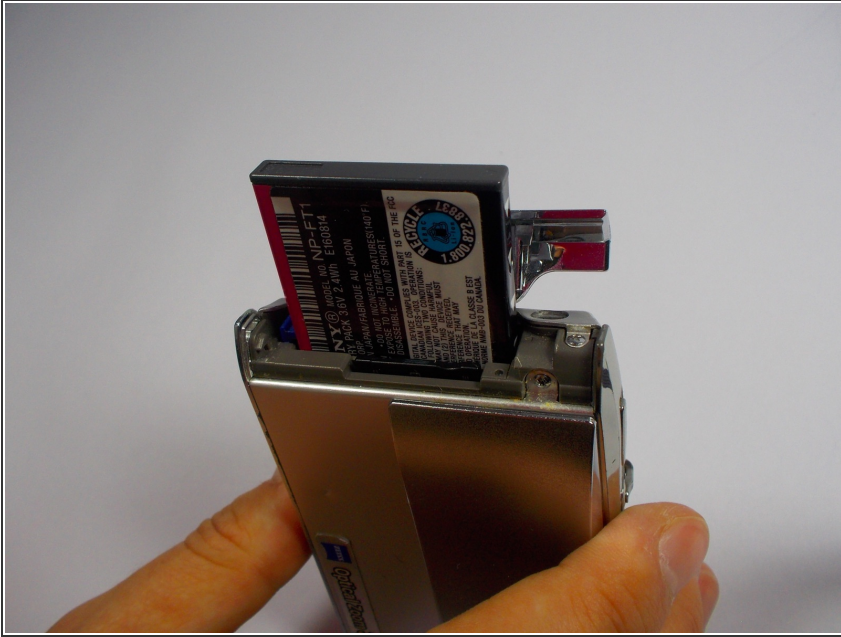

- Remove battery and insert new battery according to the direction of the arrows on the battery pack.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-24 10:55:05 PM.